




systeme

40470

Unrivalled planning versatility.

For **systeme** 40470, different seating comfort levels and a wide variety of leg designs are available. You can influence the look by simply ordering your favourite side panel. The extensive type plan offers enormous scope for planning.

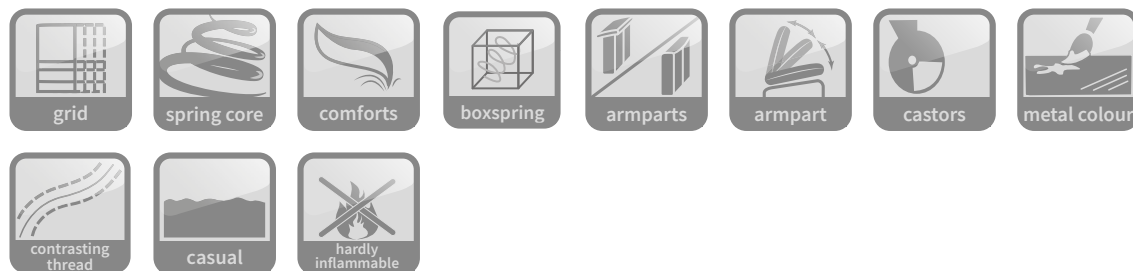

ARMCHAIRS



MH55E
armchair tall back
cushion ST A/Z and
ST E/V available



ME55
armchair ST A/Z and
ST E/V available

85/93/85/45
Boxspring = BX1
(surcharge)
fire protection =
BK12 (surcharge)

85/93/79/45
Boxspring = BX1
(surcharge)
fire protection =
BK12 (surcharge)

CORNER ELEMENTS



E
pointed corner



ET
corner element



EH
pointed corner tall
back cushion



ETH
corner element tall
back cushion


94/94/79/45
Boxspring = BX3
(surcharge)
fire protection =
BK16 (surcharge)

108/108/79/45
Boxspring = BX4
(surcharge)
fire protection =
BK18 (surcharge)


94/94/85/45
Boxspring = BX3
(surcharge)
fire protection =
BK16 (surcharge)

108/108/85/45
Boxspring = BX4
(surcharge)
fire protection =
BK18 (surcharge)


SOFAS




N60
sofa




N70
sofa



N80
large sofa



N90
large sofa



N100
large sofa




NH60
sofa tall back cushion




NH70
sofa tall back cushion



NH80
large sofa tall back
cushion



NH90
large sofa tall back
cushion



NH100
large sofa tall back
cushion

152/93/79/45
Boxspring = BX5
(surcharge)
fire protection =
BK22 (surcharge)

172/93/79/45
Boxspring = BX7
(surcharge)
fire protection =
BK25 (surcharge)

192/93/79/45
Boxspring = BX9
(surcharge)
fire protection =
BK25 (surcharge)

212/93/79/45
Boxspring = BX10
(surcharge)
fire protection =
BK28 (surcharge)

232/93/79/45
Boxspring = BX11
(surcharge)
fire protection =
BK32 (surcharge)

152/93/85/45
Boxspring = BX5
(surcharge)
fire protection =
BK22 (surcharge)

172/93/85/45
Boxspring = BX7
(surcharge)
fire protection =
BK25 (surcharge)

192/93/85/45
Boxspring = BX9
(surcharge)
fire protection =
BK25 (surcharge)

216/93/85/45
Boxspring = BX10
(surcharge)
fire protection =
BK28 (surcharge)

232/93/85/45
Boxspring = BX11
(surcharge)
fire protection =
BK32 (surcharge)

ELEMENTS WITHOUT ARMPARTS



N60K
sofa without armpart



N70K
sofa without armpart



N80K
large sofa without
armpart



N90K
large sofa without
armpart



N100K
large sofa without
armpart



NH60K
sofa without armpart
tall back cushion



NH70K
sofa without armpart
tall back cushion



NH80K
large sofa without
armpart tall back
cushion



NH90K
large sofa without
armpart tall back
cushion



NH100K
large sofa without
armpart tall back
cushion

120/93/79/45
Boxspring = BX5
(surcharge)
fire protection =
BK20 (surcharge)

140/93/79/45
Boxspring = BX7
(surcharge)
fire protection =
BK23 (surcharge)

160/93/79/45
Boxspring = BX9
(surcharge)
fire protection =
BK23 (surcharge)

180/93/79/45
Boxspring = BX10
(surcharge)
fire protection =
BK26 (surcharge)

200/93/79/45
Boxspring = BX11
(surcharge)
fire protection =
BK30 (surcharge)

120/93/85/45
Boxspring = BX5
(surcharge)
fire protection =
BK20 (surcharge)

140/93/85/45
Boxspring = BX7
(surcharge)
fire protection =
BK23 (surcharge)

160/93/85/45
Boxspring = BX9
(surcharge)
fire protection =
BK23 (surcharge)

180/93/85/45
Boxspring = BX10
(surcharge)
fire protection =
BK26 (surcharge)

200/93/85/45
Boxspring = BX11
(surcharge)
fire protection =
BK30 (surcharge)

ELEMENTS WITH ARMPART RIGHT



M60R
element with armpart



M70R
element with armpart



M80R
element with armpart



M90R
element with armpart



MH60R
element with armpart
tall back cushion



MH70R
element with armpart
tall back cushion



MH80R
element with armpart
tall back cushion



MH90R
element with armpart
tall back cushion

76/93/79/45
Boxspring = BX1
(surcharge)
fire protection =
BK11 (surcharge)

86/93/79/45
Boxspring = BX2
(surcharge)
fire protection =
BK11 (surcharge)

96/93/79/45
Boxspring = BX3
(surcharge)
fire protection =
BK14 (surcharge)

106/93/79/45
Boxspring = BX4
(surcharge)
fire protection =
BK17 (surcharge)

76/93/85/45
Boxspring = BX1
(surcharge)
fire protection =
BK11 (surcharge)

86/93/85/45
Boxspring = BX2
(surcharge)
fire protection =
BK11 (surcharge)

96/93/85/45
Boxspring = BX3
(surcharge)
fire protection =
BK14 (surcharge)


106/93/85/45
Boxspring = BX4
(surcharge)
fire protection =
BK17 (surcharge)

systeme


40470




N60R
sofa with armpart




N70R
sofa with armpart



N80R
large sofa with
armpart




N90R
large sofa with
armpart



N100R
large sofa with
armpart



NH60R
sofa with armpart tall
back cushion



NH70R
sofa with armpart tall
back cushion



NH80R
large sofa with arm-
part tall back cushion



NH90R
large sofa with arm-
part tall back cushion



NH10R
large sofa with arm-
part tall back cushion

136/93/79/45
Boxspring = BX5
(surcharge)
fire protection =
BK21 (surcharge)

156/93/79/45
Boxspring = BX7
(surcharge)
fire protection =
BK24 (surcharge)

176/93/79/45
Boxspring = BX9
(surcharge)
fire protection =
BK24 (surcharge)

196/93/79/45
Boxspring = BX10
(surcharge)
fire protection =
BK27 (surcharge)

216/93/79/45
Boxspring = BX11
(surcharge)
fire protection =
BK31 (surcharge)

136/93/85/45
Boxspring = BX5
(surcharge)
fire protection =
BK21 (surcharge)

156/93/85/45
Boxspring = BX7
(surcharge)
fire protection =
BK24 (surcharge)

176/93/85/45
Boxspring = BX9
(surcharge)
fire protection =
BK24 (surcharge)

196/93/85/45
Boxspring = BX10
(surcharge)
fire protection =
BK27 (surcharge)

216/93/85/45
Boxspring = BX11
(surcharge)
fire protection =
BK31 (surcharge)

ELEMENTS WITH ARMPART LEFT



M60L
element with armpart



M70L
element with armpart



M80L
element with armpart



M90L
element with armpart



MH60L
element with armpart
tall back cushion



MH70L
element with armpart
tall back cushion



MH80L
element with armpart
tall back cushion



MH90L
element with armpart
tall back cushion

76/93/79/45
Boxspring = BX1
(surcharge)
fire protection =
BK11 (surcharge)

86/93/79/45
Boxspring = BX2
(surcharge)
fire protection =
BK11 (surcharge)

96/93/79/45
Boxspring = BX3
(surcharge)
fire protection =
BK14 (surcharge)

106/93/79/45
Boxspring = BX4
(surcharge)
fire protection =
BK17 (surcharge)

76/93/85/45
Boxspring = BX1
(surcharge)
fire protection =
BK11 (surcharge)

86/93/85/45
Boxspring = BX2
(surcharge)
fire protection =
BK11 (surcharge)

96/93/85/45
Boxspring = BX3
(surcharge)
fire protection =
BK14 (surcharge)


106/93/85/45
Boxspring = BX4
(surcharge)
fire protection =
BK17 (surcharge)

systeme


40470




N60L
sofa with armpart




N70L
sofa with armpart



N80L
large sofa with
armpart




N90L
large sofa with
armpart



N100L
large sofa with
armpart




NH60L
sofa with armpart tall
back cushion




NH70L
sofa with armpart tall
back cushion



NH80L
large sofa with arm-
part tall back cushion



NH90L
large sofa with arm-
part tall back cushion



NH10L
large sofa with arm-
part tall back cushion

136/93/79/45
Boxspring = BX5
(surcharge)
fire protection =
BK21 (surcharge)

156/93/79/45
Boxspring = BX7
(surcharge)
fire protection =
BK24 (surcharge)

176/93/79/45
Boxspring = BX9
(surcharge)
fire protection =
BK24 (surcharge)

196/93/79/45
Boxspring = BX10
(surcharge)
fire protection =
BK27 (surcharge)

216/93/79/45
Boxspring = BX11
(surcharge)
fire protection =
BK31 (surcharge)

136/93/85/45
Boxspring = BX5
(surcharge)
fire protection =
BK21 (surcharge)

156/93/85/45
Boxspring = BX7
(surcharge)
fire protection =
BK24 (surcharge)

176/93/85/45
Boxspring = BX9
(surcharge)
fire protection =
BK24 (surcharge)

196/93/85/45
Boxspring = BX10
(surcharge)
fire protection =
BK27 (surcharge)

216/93/85/45
Boxspring = BX11
(surcharge)
fire protection =
BK31 (surcharge)


END ELEMENTS RIGHT



K70R
one arm chaise



KL90R
deep one arm chaise



EG70R
corner sofa with
ottoman

88/153/79/45
Boxspring = BX4
(surcharge)
fire protection =
BK15 (surcharge)

108/176/79/45
Boxspring = BX10
(surcharge)
fire protection =
BK18 (surcharge)


97/218/79/45
Boxspring = BX12
(surcharge)
fire protection =
BK34 (surcharge)



KH70R
one arm chaise tall
back cushion



KC90R
deep one arm chaise
tall back cushion



EC70R
corner sofa with
ottoman tall back
cushion

88/153/85/45
Boxspring = BX4
(surcharge)
fire protection =
BK15 (surcharge)

108/176/85/45
Boxspring = BX10
(surcharge)
fire protection =
BK18 (surcharge)

97/218/85/45
Boxspring = BX12
(surcharge)
fire protection =
BK34 (surcharge)


END ELEMENTS LEFT



K70L
one arm chaise



KL90L
deep one arm chaise



EG70L
corner sofa with ottoman

88/153/79/45
Boxspring = BX4
(surcharge)
fire protection =
BK15 (surcharge)

108/176/79/45
Boxspring = BX10
(surcharge)
fire protection =
BK18 (surcharge)


97/218/79/45
Boxspring = BX12
(surcharge)
fire protection =
BK34 (surcharge)



KH70L
one arm chaise tall
back cushion



KC90L
deep one arm chaise
tall back cushion




EC70L
corner sofa with
ottoman tall back
cushion

88/153/85/45
Boxspring = BX4
(surcharge)
fire protection =
BK15 (surcharge)

108/176/85/45
Boxspring = BX10
(surcharge)
fire protection =
BK18 (surcharge)

97/218/85/45
Boxspring = BX12
(surcharge)
fire protection =
BK34 (surcharge)


FREE-STANDING ELEMENTS RIGHT



C70R
free-standing sofa
with ottoman



C80R
free-standing sofa
with ottoman



CH70R
free-standing sofa
with ottoman tall
back cushion




CH80R
free-standing sofa
with ottoman tall
back cushion

214/97/79/45
Boxspring = BX12
(surcharge)
fire protection =
BK27 (surcharge)


234/97/79/45
Boxspring = BX13
(surcharge)
fire protection =
BK31 (surcharge)

214/97/85/45
Boxspring = BX12
(surcharge)
fire protection =
BK27 (surcharge)


234/97/85/45
Boxspring = BX13
(surcharge)
fire protection =
BK31 (surcharge)




C70L
free-standing sofa
with ottoman



C80L
free-standing sofa
with ottoman



CH70L
free-standing sofa
with ottoman tall
back cushion



CH80L
free-standing sofa
with ottoman tall
back cushion

214/97/79/45
Boxspring = BX12
(surcharge)
fire protection =
BK27 (surcharge)

234/97/79/45
Boxspring = BX13
(surcharge)
fire protection =
BK31 (surcharge)

214/97/85/45
Boxspring = BX12
(surcharge)
fire protection =
BK27 (surcharge)

234/97/85/45
Boxspring = BX13
(surcharge)
fire protection =
BK31 (surcharge)

OTTOMANS & ACCESSORIES



G60
ottoman



G120
large ottoman



G140
extra large ottoman



G160
extra large ottoman



U
armchair pillow

Z
base leg

60/60/45/0
Boxspring = BX1
(surcharge)
castors = RO
(surcharge)
fire protection =
BK3 (surcharge)

120/60/45/0
Boxspring = BX5
(surcharge)
castors = RO
(surcharge)
fire protection =
BK6 (surcharge)

140/60/45/0
Boxspring = BX7
(surcharge)
castors = RO
(surcharge)
fire protection =
BK7 (surcharge)

160/60/45/0
Boxspring = BX8
(surcharge)
castors = RO
(surcharge)
fire protection =
BK8 (surcharge)

46/52/0
fire protection =
BK1 (surcharge)

/0

ARMPART VERSIONS



SAR
armchair part A no surcharge
NO OVERMEASURE

/0
fire protection =
BK1 (surcharge)



SZR
armchair part Z no surcharge
NO OVERMEASURE

16/0
fire protection =
BK1 (surcharge)



SBR
armchair part B plus surcharge
overm. + 2 cm
per ap.

2/0
fire protection =
BK1 (surcharge)



SYR
armchair part Y plus
surcharge overm. + 2
cm per ap.

2/0
fire protection =
BK1 (surcharge)



SCR
armchair part C no surcharge
overm. + 10 cm
per ap.

10/0
fire protection =
BK1 (surcharge)



SXR
armchair part X no surcharge
overm. + 10 cm
per ap.

10/0
fire protection =
BK1 (surcharge)



SDR
armchair part D plus
surcharge overm. + 22
cm per ap.

22/0
armchair adjust. =
SV1 (surcharge)
fire protection =
BK1 (surcharge)



SWR
armchair part W plus
surcharge overm. + 22
cm per ap.

22/0
armchair adjust. =
SV1 (surcharge)
fire protection =
BK1 (surcharge)



SER
armchair part E no surcharge
dim. - 8 cms

/0
fire protection =
BK1 (surcharge)





SVR
armchair part V no surcharge
dim. - 8 cms

8/0
fire protection =
BK1 (surcharge)

système

40470

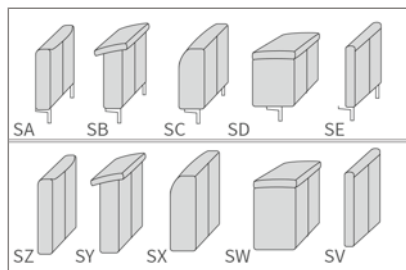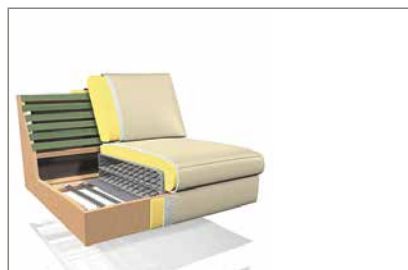

2 seat comforts/2 backrest heights

Basic or Boxspring with additional pocket spring core under-springing (surcharge). You can also choose from two backrest

10 armparts - 2 flexible

SD and SW can be equipped with the armpart adjustment with notch function (item no. = SV).

Back heights - tall

The model is available with standard as well as tall backs (items with the appendix "H" and "C").

Contrast thread

The soft stools are available in leather and some fabric colors with contrasting color thread on request at no extra charge.

„Flame retardant“

Optionally, the „flame-retardant“ version of this model can be ordered (art. no. = BK ..). **Please specify when ordering.**

ORDER INFORMATION

Armpart shapes:

The armchairs are available with the armparts SA/SZ and SE/SV, only.

One arm chaises in connection with the armparts:

The one arm chaises in connection with the armparts SE and SV have no extended seat in width at the front, the armparts simply are connected. In combination with all the other armparts, the seat/ottoman at the end is slightly widened at the front.

Flexible armparts:

Flexible armparts can carry a maximum load of 25 kg and are not a seat. The armpart is used in an upright or folded-out position. There is no locking mechanism between the positions.

The SD/SW armparts are available with armpart adjustment (SV) for surcharge. There is adjustable every armpart or none at one sofa.

www.schillig-objects.com

Flame-retardant“ version:

For technical reasons, the „flame-retardant“ version cannot be ordered for Boxspring seating comfort.

Free-standing elements:

Please note that the orientation "left/right" is the position of the armpart.

Standard and extra tall elements:

Elements with standard back height are shown light grey coloured, extra tall elements dark grey coloured. They cannot be combined with each other.

Connecting sides:

For a surcharge, the connecting sides can be supplied in the original cover instead of stretch fabric.

Seam appearance:

Decorative, felled or double seams may appear different in fabric and leather versions. For

manufacturing reasons, seams may be left out of the fabric version or replaced with simple seams.

All of the dimensions given are approximate dimensions in cm. We reserve the right to make changes. Dimensions are given as follows: width/depth/height/seat height and refer to the leg height of 13 cm and armpart SA (width 16 cm). Elements with ottoman have a total depth of ca. 97 cm depending on the ottoman at the end's depth.

Seat depth: approx. 56 cm

Armpart versions:

off-the-floor, with leg

SA - cubic, width approx. 16 cm

SB - narrow, with pillow, width approx. 18 cm - overmeasure + approx. 2 cm, surcharge

SC - cubic, angled inside, width approx. 26 cm - overmeasure + approx. 10 cm

SD - wide, with pillow, width approx. 38 cm - overmeasure + approx. 22 cm, surcharge, also available with armpart adjustment

SE - very narrow, rounded on top, width approx.

8 cm - deviation - approx. ca. 8 cm

on-the-floor, with plastic glide

SZ - cubic, width approx. 16 cm

SY - narrow, with pillow, width approx. 18 cm - overmeasure + approx. 2 cm, surcharge

SX - cubic, angled inside, width approx. 26 cm - overmeasure + ca. 10 cm

SW - wide, with pillow, width approx. 38 cm - overmeasure + approx. 2 cm, surcharge

SV - very narrow, rounded on top, width approx.

8 cm - deviation - approx. ca. 8 cm

The armparts SE and SV are smaller than the base armparts SA and SZ. Thus a deviation of approx. 8 cm is given. When ordering one arm chaises in conjunction with the narrow arm-

parts SE and SV, the ottoman at the front of the one arm chaise is not upholstered wide.

Crease formation:

Fabric and leather stretch during use, „creases“ may form in the cover. This has no influence on use, function and service life and does not constitute a material defect.

Note on upholstery construction:

Tickings cushions have been used in the back. These may show under the cover. This is a typical feature of the product.

Digital fabric/leather and colour samples:

The visual appearance of the covers and colour samples may vary, samples in accordance


W.SCHILLIG
OBJECTS

système

40470

LEGS



metal leg, gloss

F 6P

metal leg gloss **diff. metal col.**

F 7Q

metal leg **diff. metal col.**

F V8



metal runner, gloss

F 7T



wooden leg oiled oak P58

F Y3



Plastic glide

F 85

metal castor/ottoman, **surcharge**

F 7R

Please note! The legs F7Q, F6P and FV8 are wider than the narrow armparts and protrude into the frame!

Leg colours:

The legs including wood are available in a choice of different stain shades. We are happy to advise you.

Chromatic aberrations:

The wooden structure is different from ordering to ordering. Deliveries after colour samples are basically excluded from complaints and exchange. We take care of the best correspondence possible.

Castors for ottomans:

Every ottoman can be equipped with castors against surcharge. The item number is RO. Two of the castors can be fixed.

Runners:

We assemble visibly matching legs instead of the runner under the corner elements.

Plastic gliders:

The plastic glides are available for on-the-floor armpart designs, only.

Metal colours:

Some of the metal legs are available in different metal colours. Please indicate the colour

when ordering.

Legs and floor protection:

With slim furniture legs with a small gliding surface, there is increased pressure on the floor. We recommend fitting glides or an underlay to protect against scratches and pressure marks on sensitive floors.

ORDER CHECKLIST

- structure and cover
- Seat comfort Basic or Box-spring (surcharge)
- Armpart version
- Flexible armparts (surcharge)
- Flame retardant version (surcharge)
- Leg design
- Metal colour for legs

AVAILABLE METAL COLOURS



silver

M21



black

M99

UPHOLSTERED FURNITURE FRAME STRUCTURE




The design of the cross-section shown here is based on a sample and serves to illustrate the upholstery structure.

- 1. Frame** – metal construction; back: beech wood construction
- 2. Seat suspension** with permanently elastic wave springs
- 3. Seat upholstery structure** – of coil spring core incorporated into **ergo**-PUR-foam and diolen cover. Or Boxspring comfort with additional bonell coil spring core suspension additionally to the basic coil spring core (surcharge).
- 4. Back suspension** due to upholstery strap
- 5. Back upholstery structure** with high quality mix of polyester fibres and foam rods, filled in boxes; loose back cushions

Upholstered furniture from passion.

For almost 75 years, this passion has led to the creation of high-quality and special pieces of furniture and designer furniture - sofas that combine elegant and contemporary design with first-class comfort. We stand for craftsmanship, trend-setting ideas, appealing design and know-how from Germany. The result is upholstered furniture with guaranteed first-class comfort and attention to detail. When selecting the materials used, we pay attention to sustainability and the conservation of resources.

- Traditional craftsmanship down to the last detail
- High-quality, environmentally friendly materials
- Careful & precise workmanship
- Cooperation with renowned furniture designers
- Production according to DIN & RAL quality guidelines of the Deutsche Gütegemeinschaft Möbel e.V.
- Regularly tested product quality „Made in Germany“
- Development at the Upper Franconian location in Ebersdorf near Coburg
- Carefully selected fabric and leather cover collections in many colours for a wide range of requirements.

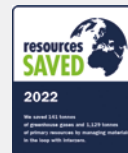

quality
Made in Germany

W.
W.SCHILLIG
OBJECTS