

[système]

Planning diversity without equal. For this model, different seat comforts as well as a wide variety of leg versions are available. You can influence the appearance by simply ordering your choice armpart. The extensive article diversity offers enormous planning scope.



BOX
Spring
by W.SCHILLIG



W
W.SCHILLIG
OBJECTS

Armchairs



MH 55 E

individual armchair tall
back cushion ST A/Z
and ST E/V available

85/93/85/45

Boxspring = BX1

(surcharge)

fire protection = **BK12**
(surcharge)



ME 55

individual armchair ST
A/Z and ST E/V
available


85/93/79/45

Boxspring = BX1

(surcharge)

fire protection = **BK12**
(surcharge)

Sofas



N 60

sofa



N 70

sofa



N 80

large sofa



N 90

large sofa



N 100

large sofa



NH 60

sofa tall back cushion



NH 70

sofa tall back cushion



NH 80

large sofa tall back
cushion



NH 90

large sofa tall back
cushion



NH 100

large sofa tall back
cushion

158/93/79/45

Boxspring = BX5

(surcharge)

fire protection = **BK22**
(surcharge)

178/93/79/45

Boxspring = BX7

(surcharge)

fire protection = **BK25**
(surcharge)

198/93/79/45

Boxspring = BX9

(surcharge)

fire protection = **BK25**
(surcharge)

218/93/79/45

Boxspring = BX10

(surcharge)

fire protection = **BK28**
(surcharge)

238/93/79/45

Boxspring = BX11

(surcharge)

fire protection = **BK32**
(surcharge)

158/93/85/45

Boxspring = BX5

(surcharge)

fire protection = **BK22**
(surcharge)

178/93/85/45

Boxspring = BX7

(surcharge)

fire protection = **BK25**
(surcharge)

198/93/85/45

Boxspring = BX9

(surcharge)

fire protection = **BK25**
(surcharge)

218/93/85/45

Boxspring = BX10

(surcharge)

fire protection = **BK28**
(surcharge)

212/93/85/45

Boxspring = BX11

(surcharge)

fire protection = **BK32**
(surcharge)

Corner elements



E

pointed corner



ET

corner element



EH

pointed corner tall back
cushion



ETH

corner element tall back
cushion

94/94/79/45

Boxspring = BX3

(surcharge)

fire protection = **BK16**
(surcharge)

108/108/79/45

Boxspring = BX4

(surcharge)

fire protection = **BK18**
(surcharge)

94/94/85/45

Boxspring = BX3

(surcharge)

fire protection = **BK16**
(surcharge)

108/108/85/45

Boxspring = BX4


(surcharge)

fire protection = **BK18**
(surcharge)

Elements without armparts




N 60 K
sofa without armpart



N 70 K
sofa without armpart



N 80 K
large sofa without
armpart



N 90 K
large sofa without
armpart




N 100 K
large sofa without
armpart




NH 60 K
sofa without armpart
tall back cushion




NH 70 K
sofa without armpart
tall back cushion



NH 80 K
large sofa without
armpart tall back
cushion



NH 90 K
large sofa without
armpart tall back
cushion



NH 10 K
large sofa without
armpart tall back
cushion

120/93/79/45
Boxspring = BX5
(surcharge)
fire protection = **BK20**
(surcharge)

140/93/79/45
Boxspring = BX7
(surcharge)
fire protection = **BK23**
(surcharge)

160/93/79/45
Boxspring = BX9
(surcharge)
fire protection = **BK23**
(surcharge)

180/93/79/45
Boxspring = BX10
(surcharge)
fire protection = **BK26**
(surcharge)

200/93/79/45
Boxspring = BX11
(surcharge)
fire protection = **BK30**
(surcharge)

120/93/85/45
Boxspring = BX5
(surcharge)
fire protection = **BK20**
(surcharge)

140/93/85/45
Boxspring = BX7
(surcharge)
fire protection = **BK23**
(surcharge)

160/93/85/45
Boxspring = BX9
(surcharge)
fire protection = **BK23**
(surcharge)

180/93/85/45
Boxspring = BX10
(surcharge)
fire protection = **BK26**
(surcharge)

180/93/85/45
Boxspring = BX11
(surcharge)
fire protection = **BK30**
(surcharge)

Elements with armpart right



M 60 R
element with armpart



M 70 R
element with armpart



M 80 R
element with armpart



M 90 R
element with armpart



MH 60 R
element with armpart
tall back cushion



MH 70 R
element with armpart
tall back cushion



MH 80 R
element with armpart
tall back cushion



MH 90 R
element with armpart
tall back cushion

76/93/79/45
Boxspring = BX1
(surcharge)
fire protection = **BK11**
(surcharge)

86/93/79/45
Boxspring = BX2
(surcharge)
fire protection = **BK11**
(surcharge)

96/93/79/45
Boxspring = BX3
(surcharge)
fire protection = **BK14**
(surcharge)

106/93/79/45
Boxspring = BX4
(surcharge)
fire protection = **BK17**
(surcharge)

76/93/85/45
Boxspring = BX1
(surcharge)
fire protection = **BK11**
(surcharge)


86/93/85/45
Boxspring = BX2
(surcharge)
fire protection = **BK11**
(surcharge)

96/93/85/45
Boxspring = BX3
(surcharge)
fire protection = **BK14**
(surcharge)

106/93/85/45
Boxspring = BX4
(surcharge)
fire protection = **BK17**
(surcharge)




N 6 0 R
sofa with armpart



N 7 0 R
sofa with armpart



N 8 0 R
large sofa with armpart



N 9 0 R
large sofa with armpart



N 1 0 0 R
large sofa with armpart



NH 6 0 R
sofa with armpart tall
back cushion



NH 7 0 R
sofa with armpart tall
back cushion



NH 8 0 R
large sofa with armpart
tall back cushion



NH 9 0 R
large sofa with armpart
tall back cushion



NH 1 0 R
large sofa with armpart
tall back cushion

139/93/79/45
Boxspring = BX5
(surcharge)
fire protection = **BK21**
(surcharge)

159/93/79/45
Boxspring = BX7
(surcharge)
fire protection = **BK24**
(surcharge)

179/93/79/45
Boxspring = BX9
(surcharge)
fire protection = **BK24**
(surcharge)

199/93/79/45
Boxspring = BX10
(surcharge)
fire protection = **BK27**
(surcharge)

219/93/79/45
Boxspring = BX11
(surcharge)
fire protection = **BK31**
(surcharge)

139/93/85/45
Boxspring = BX5
(surcharge)
fire protection = **BK21**
(surcharge)

159/93/85/45
Boxspring = BX7
(surcharge)
fire protection = **BK24**
(surcharge)

179/93/85/45
Boxspring = BX9
(surcharge)
fire protection = **BK24**
(surcharge)

199/93/85/45
Boxspring = BX10
(surcharge)
fire protection = **BK27**
(surcharge)

196/93/85/45
Boxspring = BX11
(surcharge)
fire protection = **BK31**
(surcharge)

Elements with armpart left



M 6 0 L
element with armpart



M 7 0 L
element with armpart



M 8 0 L
element with armpart



M 9 0 L
element with armpart



MH 6 0 L
element with armpart
tall back cushion



MH 7 0 L
element with armpart
tall back cushion



MH 8 0 L
element with armpart
tall back cushion



MH 9 0 L
element with armpart
tall back cushion

76/93/79/45
Boxspring = BX1
(surcharge)
fire protection = **BK11**
(surcharge)

86/93/79/45
Boxspring = BX2
(surcharge)
fire protection = **BK11**
(surcharge)

96/93/79/45
Boxspring = BX3
(surcharge)
fire protection = **BK14**
(surcharge)

106/93/79/45
Boxspring = BX4
(surcharge)
fire protection = **BK17**
(surcharge)

76/93/85/45
Boxspring = BX1
(surcharge)
fire protection = **BK11**
(surcharge)


86/93/85/45
Boxspring = BX2
(surcharge)
fire protection = **BK11**
(surcharge)

96/93/85/45
Boxspring = BX3
(surcharge)
fire protection = **BK14**
(surcharge)


106/93/85/45
Boxspring = BX4
(surcharge)
fire protection = **BK17**
(surcharge)




N 6 0 L
sofa with armpart




N 7 0 L
sofa with armpart



N 8 0 L
large sofa with armpart



N 9 0 L
large sofa with armpart



N 1 0 0 L
large sofa with armpart




NH 6 0 L
sofa with armpart tall
back cushion



NH 7 0 L
sofa with armpart tall
back cushion



NH 8 0 L
large sofa with armpart
tall back cushion



NH 9 0 L
large sofa with armpart
tall back cushion



NH 1 0 L
large sofa with armpart
tall back cushion

139/93/79/45
Boxspring = BX5
(surcharge)
fire protection = **BK21**
(surcharge)

159/93/79/45
Boxspring = BX7
(surcharge)
fire protection = **BK24**
(surcharge)

179/93/79/45
Boxspring = BX9
(surcharge)
fire protection = **BK24**
(surcharge)

199/93/79/45
Boxspring = BX10
(surcharge)
fire protection = **BK27**
(surcharge)

219/93/79/45
Boxspring = BX11
(surcharge)
fire protection = **BK31**
(surcharge)

139/93/85/45
Boxspring = BX5
(surcharge)
fire protection = **BK21**
(surcharge)

159/93/85/45
Boxspring = BX7
(surcharge)
fire protection = **BK24**
(surcharge)

179/93/85/45
Boxspring = BX9
(surcharge)
fire protection = **BK24**
(surcharge)


199/93/85/45
Boxspring = BX10
(surcharge)
fire protection = **BK27**
(surcharge)

196/93/85/45
Boxspring = BX11
(surcharge)
fire protection = **BK31**
(surcharge)


End elements right



K 7 0 R
one arm chaise



KL 9 0 R
deep one arm chaise



EG 7 0 R
corner sofa with
ottoman


88/153/79/45
Boxspring = BX4
(surcharge)
fire protection = **BK15**
(surcharge)

108/176/79/45
Boxspring = BX10
(surcharge)
fire protection = **BK18**
(surcharge)


97/218/79/45
Boxspring = BX12
(surcharge)
fire protection = **BK34**
(surcharge)



KH 7 0 R
one arm chaise tall back
cushion



KC 9 0 R
deep one arm chaise tall
back cushion



EC 7 0 R
corner sofa with
ottoman tall back
cushion

88/153/85/45
Boxspring = BX4
(surcharge)
fire protection = **BK15**
(surcharge)

108/176/85/45
Boxspring = BX10
(surcharge)
fire protection = **BK18**
(surcharge)

97/218/85/45
Boxspring = BX12
(surcharge)
fire protection = **BK34**
(surcharge)


End elements left



K 7 0 L
one arm chaise



KL 9 0 L
deep one arm chaise



EG 7 0 L
corner sofa with
ottoman


88/153/79/45
Boxspring = BX4
(surcharge)
fire protection = **BK15**
(surcharge)

108/176/79/45
Boxspring = BX10
(surcharge)
fire protection = **BK18**
(surcharge)


97/218/79/45
Boxspring = BX12
(surcharge)
fire protection = **BK34**
(surcharge)



KH 7 0 L
one arm chaise tall back
cushion



KC 9 0 L
deep one arm chaise tall
back cushion



EC 7 0 L
corner sofa with
ottoman tall back
cushion

88/153/85/45
Boxspring = BX4
(surcharge)
fire protection = **BK15**
(surcharge)


108/176/85/45
Boxspring = BX10
(surcharge)
fire protection = **BK18**
(surcharge)

97/218/85/45
Boxspring = BX12
(surcharge)
fire protection = **BK34**
(surcharge)


Free-standing elements right



C 7 0 R
free-standing sofa with
ottoman



C 8 0 R
free-standing sofa with
ottoman



CH 7 0 R
free-standing sofa with
ottoman tall back
cushion



CH 8 0 R
free-standing sofa with
ottoman tall back
cushion

215/97/79/45
Boxspring = BX12
(surcharge)
fire protection = **BK27**
(surcharge)


235/97/79/45
Boxspring = BX13
(surcharge)
fire protection = **BK31**
(surcharge)

215/97/85/45
Boxspring = BX12
(surcharge)
fire protection = **BK27**
(surcharge)

235/97/83/45
Boxspring = BX13
(surcharge)
fire protection = **BK31**
(surcharge)



C 7 0 L
free-standing sofa with
ottoman



C 8 0 L
free-standing sofa with
ottoman



CH 7 0 L
free-standing sofa with
ottoman tall back
cushion



CH 8 0 L
free-standing sofa with
ottoman tall back
cushion

215/97/79/45
Boxspring = BX12
(surcharge)
fire protection = **BK27**
(surcharge)

235/97/79/45
Boxspring = BX13
(surcharge)
fire protection = **BK31**
(surcharge)

215/97/85/45
Boxspring = BX12
(surcharge)
fire protection = **BK27**
(surcharge)

235/97/83/45
Boxspring = BX13
(surcharge)
fire protection = **BK31**
(surcharge)

Ottomans & accessories



G 6 0
ottoman



G 1 2 0
large ottoman



G 1 4 0
extra large ottoman



G 1 6 0
extra large ottoman



U
armchair pillow

Z
base leg

60/60/45/0
Boxspring = BX1
(surcharge)
castor - upgrade = RO
(surcharge)
fire protection = **BK3**
(surcharge)

120/60/45/0
Boxspring = BX5
(surcharge)
castor - upgrade = RO
(surcharge)
fire protection = **BK6**
(surcharge)

140/60/45/0
Boxspring = BX7
(surcharge)
castor - upgrade = RO
(surcharge)
fire protection = **BK7**
(surcharge)

160/60/45/0
Boxspring = BX8
(surcharge)
castor - upgrade = RO
(surcharge)
fire protection = **BK8**
(surcharge)

46/52/0
fire protection = **BK1**
(surcharge)

/0

Armpart designs



S A R
armp. A no surcharge
NO OVERMEASURE



S Z R
armpart Z no surcharge
NO OVERMEASURE



S B R
armp. B plus surcharge
overm. + 2 cm per ap.



S Y R
armpart Y plus
surcharge overm. + 2
cm per ap.



S C R
armpart C no surcharge
overm. + 10 cm per ap.



S X R
armpart X no surcharge
overm. + 10 cm per ap.



S D R
armpart D plus
surcharge overm. + 22
cm per ap.



S W R
armpart W plus
surcharge overm. + 22
cm per ap.



S E R
armpart E no surcharge
ABMASS 8 cm



S V R
armpart V no surcharge
ABMASS 8 cm

/0
fire protection = **BK1**
(surcharge)

16/0
fire protection = **BK1**
(surcharge)

18/0
fire protection = **BK1**
(surcharge)

18/0
fire protection = **BK1**
(surcharge)

26/0
fire protection = **BK1**
(surcharge)

26/0
fire protection = **BK1**
(surcharge)

38/0
single armpart fct. =
SV1 (surcharge)
fire protection = **BK1**
(surcharge)

38/0
single armpart fct. =
SV1 (surcharge)
fire protection = **BK1**
(surcharge)

/0
fire protection = **BK1**
(surcharge)

8/0
fire protection = **BK1**
(surcharge)


2 seat comforts/2 backrest heights

Basic or Boxspring with additional pocket spring core under-springing (surcharge). You can also choose from two backrest heights. See type plan.




10 armparts - 2 flexible

The model is available with different armpart designs. See order information. SD and SW can be equipped with the armpart adjustment with notch function (item no. = SV).

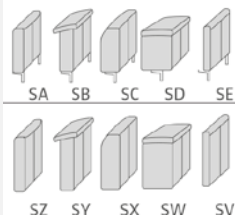

Back heights - tall

The model is available with standard as well as tall backs (items with the appendix "H" and "C"). Both heights cannot be combined with each other.

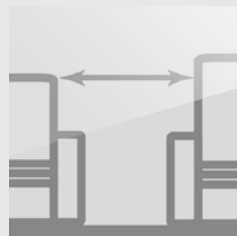

Contrasting thread

In some leather colours the soft ottomans are available with contrasting-colour thread, at no extra charge. Please always specify the contrasting thread number or tonal colours will be supplied.



"Flame retardant"

Optionally, the "flame-retardant" version of this model can be ordered (art. no. = BK ..). Please specify when ordering.



Order information

Armpart shapes:

The armchairs are available with the armpart shapes SA/SZ and SE/SV, only.

The one arm chaises in connection with the armparts:

The one arm chaises in connection with the armparts SE and SV have no extended seat in width at the front, the armparts simply are connected. In combination with all the other armparts, the seat/ottoman at the end is slightly widened at the front.

Flexible armparts:

In the case of flexible armparts a maximum weight-bearing capacity of up to 25 kg is guaranteed. They are not to be used for sitting on. The adjustable armpart is used in straight or completely opened out function. A position in between is not planned.

The SD and SW armparts are available with armpart adjustment (SV) for surcharge. Please indicate when ordering – N 70 + SD + SV for example. There is adjustable every armpart or none at one sofa.

Version "flame-retardant" not possible in combination with the Boxspring seat comfort: Please note that when choosing the Boxspring seat comfort, the version "flame-retardant" cannot be ordered due to technical reasons.

Free-standing elements:

Please note that the orientation "left/right" is the position of the armpart at the element.

Standard and extra tall elements:

Elements with standard back height are shown light grey coloured, extra tall elements dark grey coloured. Standard tall elements and extra tall elements cannot be combined with each other.

Connecting sides:

For a surcharge, the connecting sides can be supplied in the original cover instead of stretch fabric.

Seam appearance:

Decorative, felled or double seams may appear different in fabric and leather versions. For manufacturing reasons, seams may be left out of the fabric version or replaced with simple seams.

All of the dimensions given are approximate dimensions in cm. We reserve the right to make changes. Dimensions are given as follows: width/depth/height/seat height and refer to the leg height of 13 cm as well as armpart SA (width 16 cm). Elements with ottoman have a total depth of ca. 97 cm depending on the ottoman at the end's depth.

Seat depth: ca. 56 cm

Armpart designs:

off-the-floor, with leg

SA - cubic, straight, width approx. **16 cm**

SB - narrow, with pillow, width approx. **18 cm** - overmeasure + approx. **2 cm**, surcharge

SC - cubic, angled inside, width approx. **26 cm** - overmeasure + approx. **10 cm**

SD - wide, with pillow, width approx. **38 cm** - overmeasure + approx. **22 cm**, surcharge, also available with armpart adjustment

SE - very narrow, rounded on top, width approx. **8 cm** - deviation - approx. ca. **8 cm**

on-the-floor, with plastic glider

SZ - cubic, straight, width approx. **16 cm**

SY - narrow, with pillow, width approx. **18 cm** - overmeasure + approx. **2 cm**, surcharge

SX - cubic, angled inside, width approx. **26 cm** - overmeasure + ca. **10 cm**

SW - wide, with pillow, width approx. **38 cm** - overmeasure + approx. **2 cm**, surcharge

SV - very narrow, rounded on top, width approx. **8 cm** - deviation - approx. ca. **8 cm**

Please note that the armparts SE and SV are smaller than the base armparts SA and SZ. Thus a deviation of approx. 8 cm is given. When ordering one arm chaises in conjunction with the narrow armparts SE

and SV, the ottoman at the front of the one arm chaise is not upholstered wide.

Crease formation:

Fabric and leather stretch to a lesser or larger extent under the influence of body weight, which can lead to the formation of creases in the cover. This visual change does not affect use, function and life span and it is not a defect.

Information on the upholstery structure:

Chamber cushions filled with a high-quality mix of polyester fibres and foam rods have been used in the back of this model. This can lead to depression of the individual chambers, which is a typical product characteristic.

Order checklist

- Structure and cover
- Seat comfort Basic or Boxspring (surcharge)
- Armpart design
- Flexible armparts (surcharge)
- Flame retardant version (surcharge)
- Leg design
- Metal colour for legs
- Ottomans
- Castors for ottomans (surcharge)
- Positioning diagram
- Contrasting thread
- Pillows
- Base leg Z

Upholstered furniture frame structure

- 1. Frame** – metal construction; back: beech wood construction
- 2. Seat suspension** with permanently elastic wave springs
- 3. Seat upholstery structure** – of coil spring core incorporated into ergo-PUR-foam and diolen cover. Or Boxspring comfort with additional bonell coil spring core suspension additionally to the basic coil spring core (surcharge).
- 4. Back suspension** due to upholstery strap
- 5. Back upholstery structure** with high quality mix of polyester fibres and foam rods, filled in boxes; loose back cushions



The design of the cross section shown here does not correspond to the model on this page of the catalogue.

Upholstered furniture made with passion.

Your model is the product of German design and engineering. The family-owned company W.SCHILLIG has more than 70 years' experience of technical skill, trend-setting ideas, attractive design and know-how from Germany. The result is upholstered furniture that guarantees first class comfort and attention to detail. We keep sustainability and protection of resources in mind when choosing the materials we use.



The RAL quality mark for furniture stands for the certain knowledge that this is a non-hazardous piece of furniture of reliably high quality and with an attractive design. The Deutsche Gütegemeinschaft Möbel makes sure of this with numerous tests. Inspections also safeguard the testing system.



The highest European accolade for systematic, in-house, environmental management. Improvement of environmental protection services.

Legs



metal leg, gloss

F 6 P



metal leg gloss
diff. metal col.

F 7 Q



metal leg diff.
metal col.

F V 8



metal runner,
gloss

F 7 T



wooden leg oiled
oak P58

F Y 3



Plastic glider

F 8 5



metal castor/
ottoman,
surcharge

F 7 R

Upholstered furniture frame structure

- 1. Frame** – metal construction; back: beech wood construction
- 2. Seat suspension** with permanently elastic wave springs
- 3. Seat upholstery structure** – of coil spring core incorporated into ergo-PUR-foam and diolen cover. Or Boxspring comfort with additional bonell coil spring core suspension additionally to the basic coil spring core (surcharge).
- 4. Back suspension** due to upholstery strap
- 5. Back upholstery structure** with high quality mix of polyester fibres and foam rods, filled in boxes; loose back cushions



The design of the cross section shown here does not correspond to the model on this page of the catalogue.

Upholstered furniture made with passion.

Your model is the product of German design and engineering. The family-owned company W.SCHILLIG has more than 70 years' experience of technical skill, trend-setting ideas, attractive design and know-how from Germany. The result is upholstered furniture that guarantees first class comfort and attention to detail. We keep sustainability and protection of resources in mind when choosing the materials we use.



The RAL quality mark for furniture stands for the certain knowledge that this is a non-hazardous piece of furniture of reliably high quality and with an attractive design. The Deutsche Gütegemeinschaft Möbel makes sure of this with numerous tests. Inspections also safeguard the testing system.



The highest European accolade for systematic, in-house, environmental management. Improvement of environmental protection services.

Legs

Please note! The legs F7Q, F6P and FV8 are wider than the narrow armparts and protrude into the frame!

Leg colours:

The legs including wood are available in a choice of different stain shades. We are happy to advise you.

Chromatic aberrations:

The wooden structure is different from ordering to ordering. Deliveries after colour samples are basically excluded from complaints and exchange. We take care of the best correspondence possible.

Castors for ottomans:

Every ottoman can be equipped with castors against surcharge. The item number is R0. Two of the castors can be fixed.

Runners:

We assemble visibly matching legs instead of the runner under

the corner elements.

Plastic gliders:

The plastic gliders are available for on-the-floor armpart designs, only.

Metal colours:

Some of the metal legs are available in different metal colours. Please indicate the colour when ordering.


Powder coated:

The colours silver M21 and black M99 are powder coated.

Legs and floor protection:

In case of very slender furniture legs with deliberately filigree shapes and with small surfaces, it comes to a raised pressure on the floor. We recommend felt pads or another suitable mat as protection for scratches and pressure points in connection with sensitive and/or soft floors. Even if you barely move the furniture, it can be helpful to have a carpeted floor.

Available metal colours



silver

black

M 21

M 99

www.schillig-objects.com

